Accessories

For Electropermanent Magnetic Chucks

EPM chucks need a controller for switching ON/OFF. The magnetic power can be controlled in 8 steps.

Multiple chucks can also be switched at a time by a multi channel controller or with additional junction box JB in between chuck and controller. A square pole 50 needs at 400V app. 0,5 A, a pole 75 app. 1A. The controllers are equipped with fixed 3m source cable for Plug 16A/32A. Each channel of the controller is connected with the chuck by a 3.5 m shielded, heat and water resistant cable with bayonet and terminal. For special purposes special connecting cables are available.



PVF fixed Pole extension



PVB mobile Pole extension compressed (left) and expanded (right)





Hand operating unit pendant with 8 powersteps (with pin plug for connection with controller)

Technical data	Pole size	Dimensions	Version	No.
Pole extensions [Typ]	[mm]	[mm]		
PVF 50	50	50 x 50 x 32	fixed	38010
PVB 50	50	50 x 50 x 32 (+/-3)	mobile	38011
PVF 70	70	70 x 70 x 45	fixed	40127
PVB 70	70	70 x 70 x 45 (+/-5)	mobile	40128

Technical data	Channel	No.
Controller [Typ]		
EPM-D50 to 50 A, with pendant	1	13070
EPM-D100 to 100 A, with pendant	1	52950
EPM-D100-4 to 100 A, with pendant	4	58088
EPM-D100-6 to 100 A, with pendant	6	60875




Bayonet connection



Bayonet socket



Bayonet plug

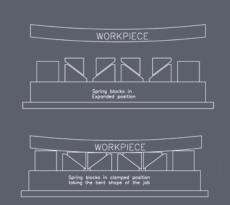



4-channel- operator panel for D100-4